

## On-line inspection of sealing compound in covering lid

After injection of the sealing compound in the covering lid, curing takes place in the tunnel furnace. Here, fault points and faulty thicknesses of compound must be acquired and faulty lids must be sorted out in the production process. A laser-based optical displacement measurement system samples the compound surface of the rotating lid for a quality inspection. The monitoring of the thickness contour within the permissible tolerance limits and the sorting of the faulty lids occurs with the aid of the PLC that is employed.


### Technical detail

- Measuring range 2 mm
- Accuracy: 5/10 mm
- Resolution: 1/10 mm
- Bandwidth: 10 kHz
- reflecting target surface

### Ambient conditions

- Temperature: 20-35 °C
- Medium: air
- Interference fields: none

### Principle

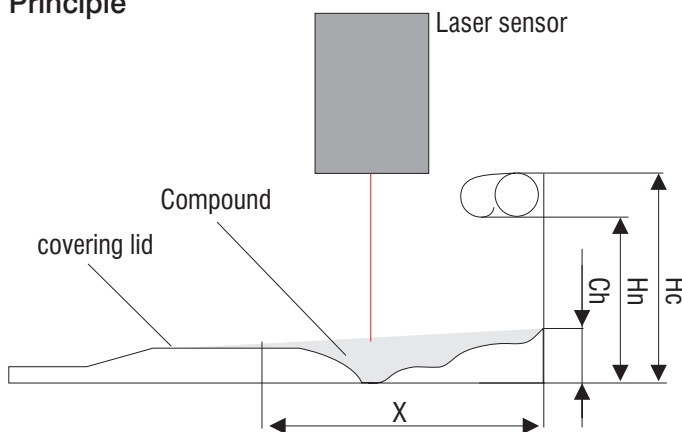

### Measuring system setup: LD1605-2

### Reasons for the system selection

- Accurate, fast and reliable.
- Small light spot diameter.
- Non-contacting and therefore wear-free.
- Laser Protection Class 2.

